

Fig.2

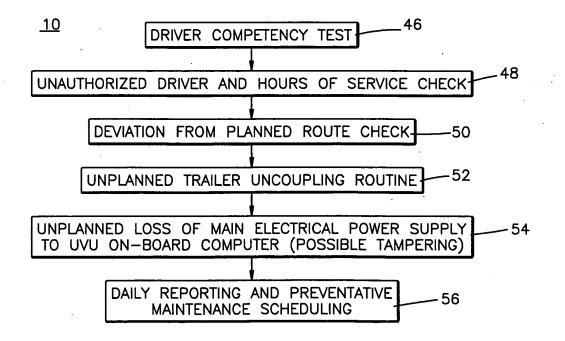
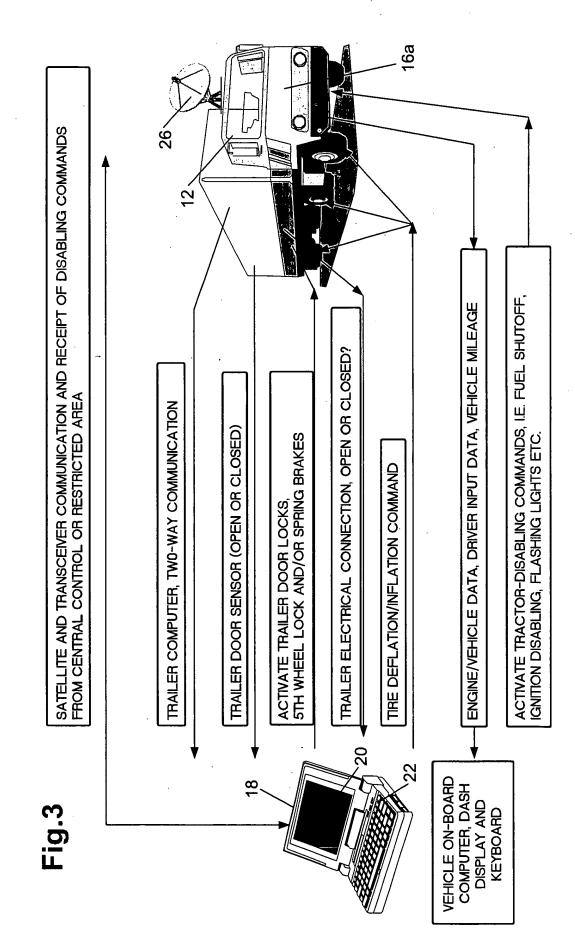


Fig.6






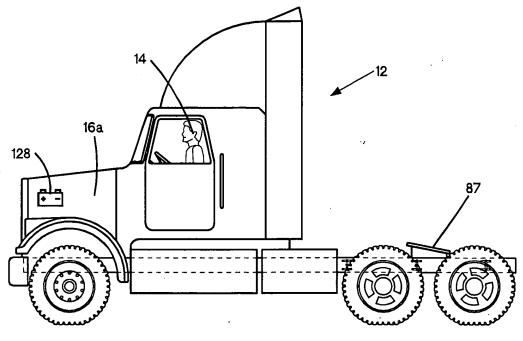



Fig.4

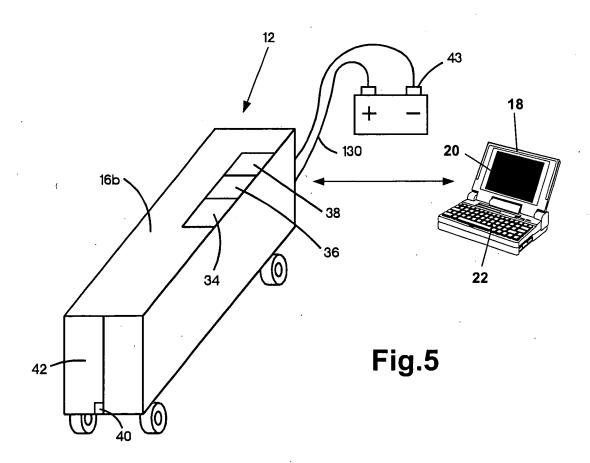


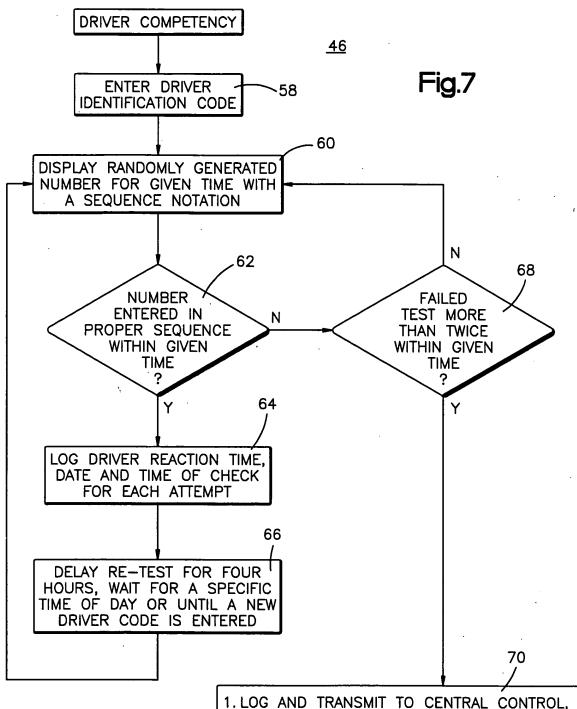


- 1. LOG AND TRANSMIT TO CENTRAL CONTROL, REAL—TIME DRIVER PHOTO, REACTION TIME AND INABILITY TO ENTER PROPER NUMBER FOR EACH ATTEMPT.
- 2. PROGRAMMABLE OPTION TO DISABLE THE VEHICLE FOR GIVEN TIME OR UNTIL EITHER CENTRAL CONTROL PROVIDES AN OVERRIDE CODE OR A NEW DRIVER CODE IS ENTERED.

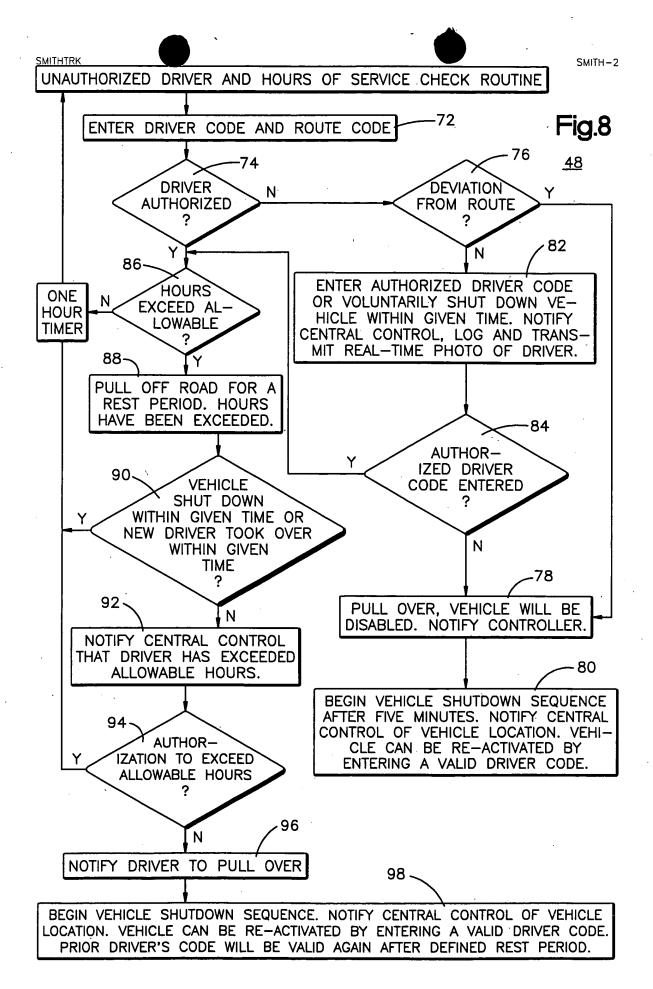

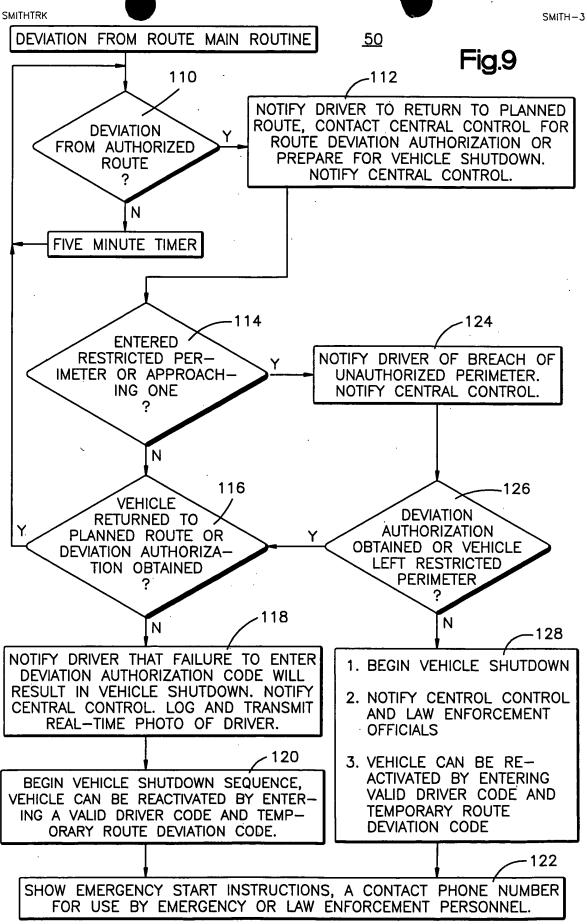

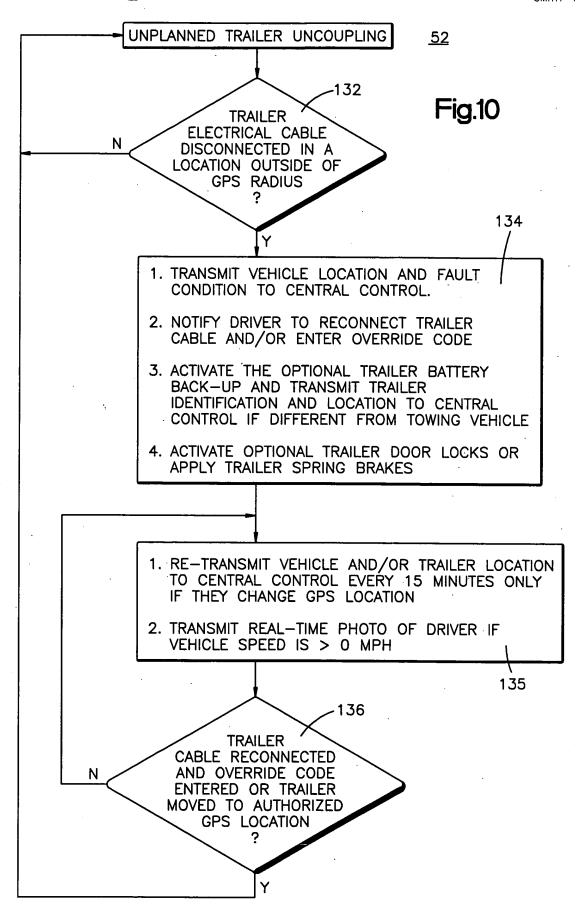

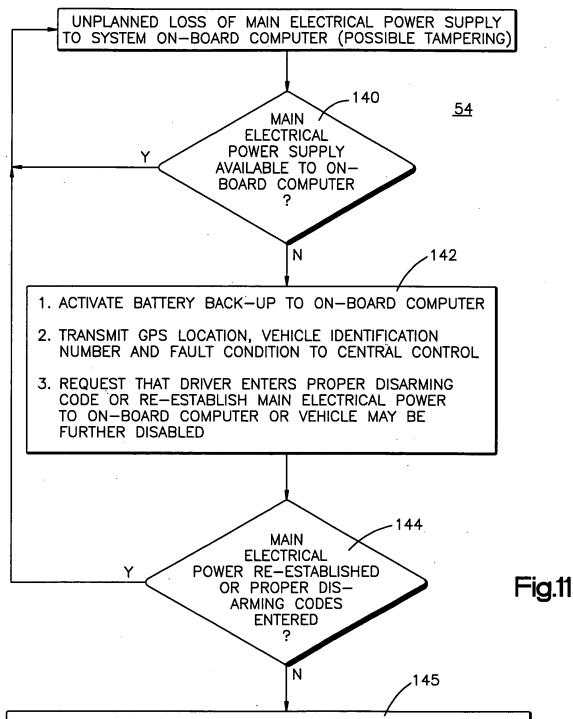

- 1. TRANSMIT GPS LOCATION, VEHICLE IDENTIFICATION NUMBER, REAL—TIME PHOTO OF DRIVER AND FAULT CONDITION TO CENTRAL CONTROL IF VEHICLE LOCATION CHANGES
- 2. IF THE VEHICLE OWNER HAS PROGRAMMED THE DISABLING FEATURE, IT WILL NOW BE ACTIVATED
- 3. SYSTEM CAN BE RESET BY RE-ESTABLISHING UVU COMPUTER POWER OR OVER RIDDEN BY ENTERING DISARMING CODE

